


## **INSTALLATION INSTRUCTIONS**

Single-Handle Concealed Mixer W/ 3-Way Diverter (Two Inlets) 單控冷熱一切三埋壁閥體組安裝說明

#### **Applicable Product Number:**

適用產品型號:

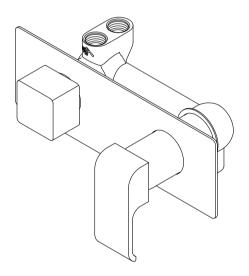

6904-XG-80CP

6904-XG-81CP

6904-XG-82CP

6904-XG-83CP

## **CARE & CLEANING**

## 清潔與保養

CAUTION: This product might be damaged by improper installation, acid cleaning solution, misuse, improper care and cleaning.

- 1. Always follow the INSTALLATION INSTRUCTIONS provided and use extreme care while installing.
- 2. Do not use acid cleaning solution or abrasive cleaner (Ex: Hydrochloric acid or toothpaste); test your cleaning solution on an inconspicuous area before applying to the entire surface.
- 3. Wipe surfaces clean and rinse completely with water immediately after applying cleaner. Do not soak with cleaners. Rinse and dry any overspray that lands on nearby surfaces.
- 4. Use a dampened sponge or cloth to clean surface. (Do not use abrasive material such as brush or scouring pad. )

注意:此產品有可能因為不當安裝,誤用酸性清潔劑或清潔方式不 正確而造成產品受損。

- 1. 產品安裝時必須依照產品所附的安裝說明和操作方式安裝。
- 2. 不可使用含有酸性或具研磨效果的清潔劑清洗(例如:鹽酸、牙膏),請先在產品較不顯眼的地方測試您的清潔方法,然後再應用到整個表面。
- 3. 產品塗佈清潔劑後,應立即擦拭除污,用清水沖洗,並擦乾產品和檯面。切勿讓清潔劑在產品表面浸濕潤清過久。
- 4. 請使用濕海綿或乾淨棉布擦拭產品表面。(不可使用會刮傷或具 研磨材質的刷子及鋼刷)。

## **FIXING CONTENTS**

## 組配件內容

# A. Valve Body X 1 (with sleeve)

牆壁內本體(含保護套筒)



#### C. Handle X 1

開關把手



## E. Retaining Nut X 1

固定螺帽



#### G. Set Screw × 1

止付螺絲



### **B.** Divertor Handle X 1

切換器把手組



#### D. Plate X 1

面板



## F. Hex Key X 1

六角扳手



## **INSTALLATION NOTE**

## 安裝注意事項

## CAUTION: Please read the following point carefully before Installation.

- 1. Keep the **Valve Body** faces horizontal and parallel to the wall that will be finished.
- 2. Connect hot and cold supplies pipes to the **Valve Body**, and keep the distance from center of **Valve Bady** to **Finished Wall** between 2"(5.1cm) minimum and 3"(7.6cm) maximum.

## **⚠CAUTION**: Prevent the risk of product damage.


1. When finished installation, turn the valve on and run water for 1 minute to remove any debris before using.

↑注意:安裝前,請詳閱下列注意事項。

- 1. 本產品安裝固定閥體於牆壁內側時,閥體需與牆壁保持平行。
- 2. 進水管中心與最終完成牆面的距離須保持在最小2"(5.1cm)到最大 3"(7.6cm)之間。


⚠注意:為增加產品使用壽命,請依說明清潔供水管路。

 完成安裝後,需在使用前先把供水開關全開排水持續一分鐘,去 除雜質,以保持管路清潔。

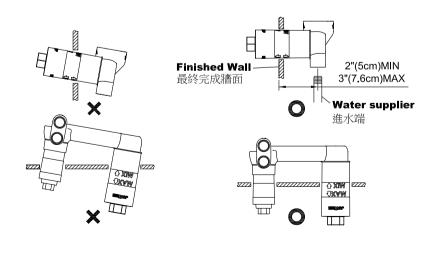


## INSTALLATION INSTRUCTIONS


安裝說明

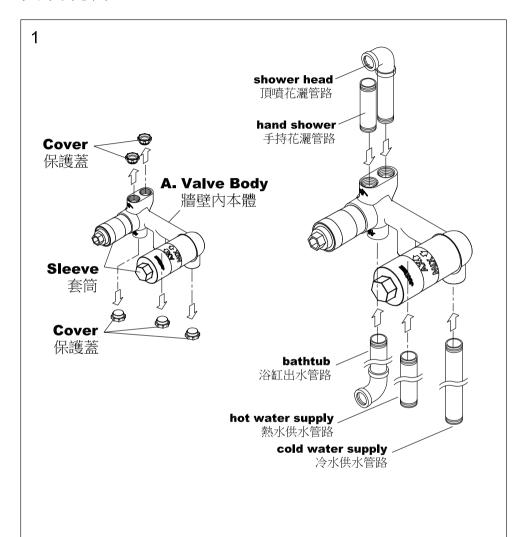

- \* Remove the **Covers** before installation. 安裝前請先移除冷熱水進水口及出水口保護蓋。
- \* Install outlets, hot and cold water supply pipes as figure shows. 依圖示,安裝冷熱供水管路以及浴缸、手持、頂噴花灑管路。

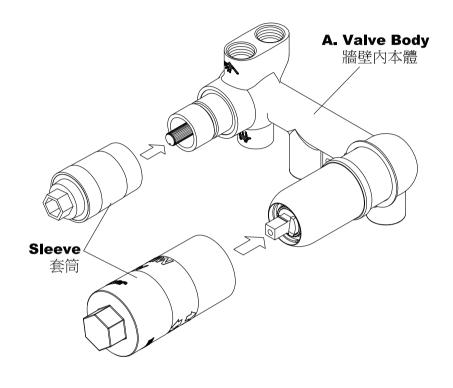

\* Use **Sleeves** to protect the cartridge and thread before installation, and **Sleeves** could be removed only after complete the finished wall. 使用套筒保護陶瓷中心栓及螺牙,必須在安裝程序前先套上。完成 埋壁體安裝程序後才可以取下套筒。

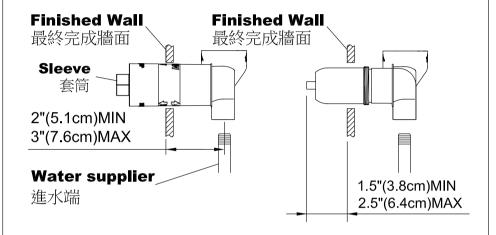


\* Connect hot and cold supply pipes to the **Valve Body**, and keep the distance between 2" (5.1cm) minimum and 3" (7.6cm) maximum from the Finished Wall to the center of **Valve Body**; or keep the distance be 1.5 " (3.8cm) to 2.5" (6.4cm) between top of cartridge and Finished Wall for necessary conditions.


安裝牆壁內本體時需預留的牆壁厚度,牆壁內本體與最終完成牆面的距離須保持在最小2"(5.0cm)到最大3"(7.6cm)之間,或陶瓷中心栓與最終完成牆面保持在最小1.5"(3.8cm)到最大2.5"(6.4cm),此為安裝必要條件。


## 4

- 1. Place the **Plate** to wall.
- 1.將面板套入半圓蓋及螺牙。

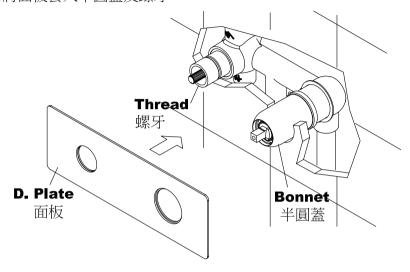


- 2.Fix the **Plate** against wall with **Retaining Nut**.
- 2.取固定螺帽將面板完全固 定且貼合牆壁。

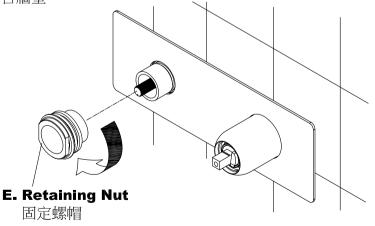

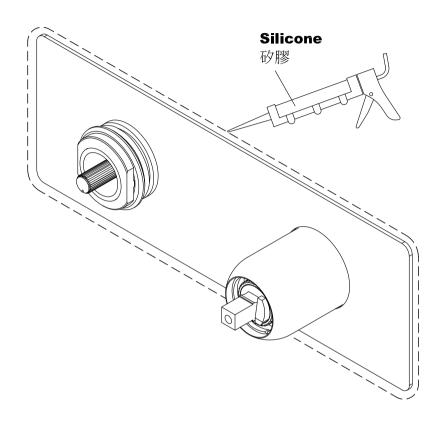


\* Seal the edge with Silicone. 面板邊緣以矽膠黏著。

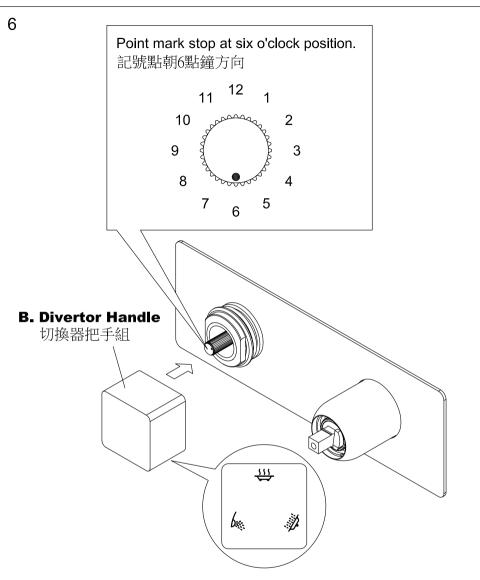

\* Face to the main body, and then turn the **Divertor Spindle** until the point mark stop at six o'clock position. Press **Divertor Handle** onto valve spindle until heard a click sound.

面對切換器中心栓,轉動中心栓,使記號點朝向6點鐘方向。將切換器把手依圖示方向組入中心栓,壓到底之後會有喀噠聲,表示安裝完成。



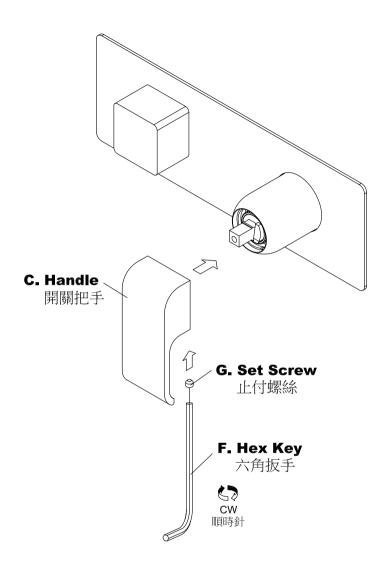

\* Assemble the **Handle** to **Spindle of Cartridge**, and then tighten the **Set Screw** with **Hex Key**.

取開關把手,然後套入閥心,再使用六角扳手鎖入止付螺絲,使開關把手完全固定且貼合牆壁。

#### WARRANTY

Sheng Tai Co., Ltd. offer a three-year warranty on all of the Faucets & Bathroom Accessories from date of purchasing. The warranty covers any defect in material and workmanship during normal residential use. The following conditions of defect are charged for maintaining.

- Damage caused by accident, misuse, improper care and cleaning.
- Improper using or installation.
- Defects because of the external factors, such as erodent environment (ex. Seashore or mineral spring.), animal bites or dead body remains in product etc.
- Defect because of sand or impurity stuck in faucet water way.
- Using water not adhered to the regulations of national standard.
- Deficiency caused by freeze.
- Not showing this warranty card.
- Not filling out in the blank of name of customer, date of purchase, cost of purchase, company of installation (retail store) and stamp on warranty card.
- Sheng Tai Co., Ltd. is not responsible for labor charges, installation, or other incidental or consequential costs.

勝泰衛材股份有限公司提供所有的水龍頭及浴室配件,從購買之日起三年保固。保固範圍包括在一般住宅正常使用的期間,發現產品有任何材質和加工上的瑕疵。如瑕疵有下列情形,將收取維修費用。

- 因意外事故、不當操作使用,不當的保養維護和清洗所造成的損害。
- 不當使用或安裝。
- 外在因素造成產品的瑕疵,如易造成侵蝕的環境(如濱海或溫泉地區)、動物囓咬或屍體存在 於產品內造成的損壞。
- 因砂子或雜質卡住水龍頭水路造成的損壞。
- 沒有依循國家標準的規定使用水源造成的損壞。
- 因冰凍造成的水量不足。
- 未出示此保固卡。
- 未在空白處填寫客戶名稱,購買日期,購買成本,安裝公司(零售商店),及保證卡上未蓋章。
- 勝泰衛材股份有限公司不負責工人費用,安裝,或其他附帶或間接產生的費用。

Customer	Name		Tel	
	Address			
Product	Serial No.		Name	
	Warranty	Three year from date of purchase.		
Purchase place	Store		Tel	
	Address			
Purchase Date				
Purchase Price				



#### SHENG TAI BRASSWARE CO., LTD.

No.99 Sec.3 Chang Tsao Rd. Ho Me, Chang Hua, Taiwan

508 台灣彰化縣和美鎮彰草路3段99號

TEL: +886-4-7629971~4 FAX: +886-4-7526980

E-mail: shengtai@ms10.hinet.net Facebook: www.facebook.com/JUSTIME